



MOUNTING TEMPLATE

- 1 Identify where the Receiver will be located in valve box. Ensure that this is not directly over valves.
- 2 Using the Mounting Template identify where you will predrill. Ensure that you avoid the ribs on your valve box lid.

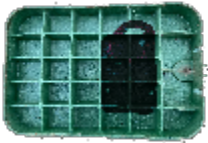


- 3 Drill 3/16" Thru Holes in the valve box lid as show on the template.

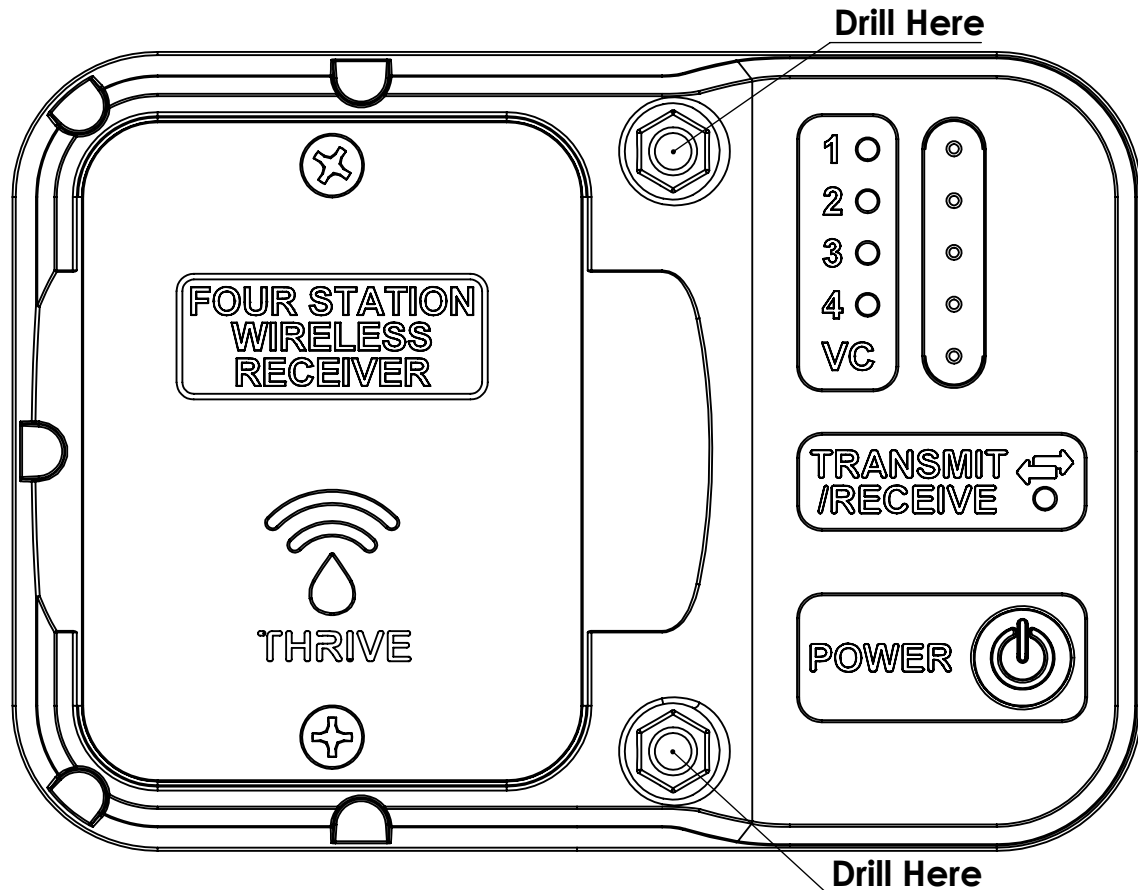


RMT 1700102 REV 1

MOUNTING TEMPLATE

- 1 Identify where the Receiver will be located in valve box. Ensure that this is not directly over valves.
- 2 Using the Mounting Template identify where you will predrill. Ensure that you avoid the ribs on your valve box lid.

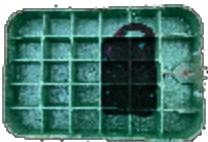

- 3 Drill 3/16" Thru Holes in the valve box lid as show on the template.

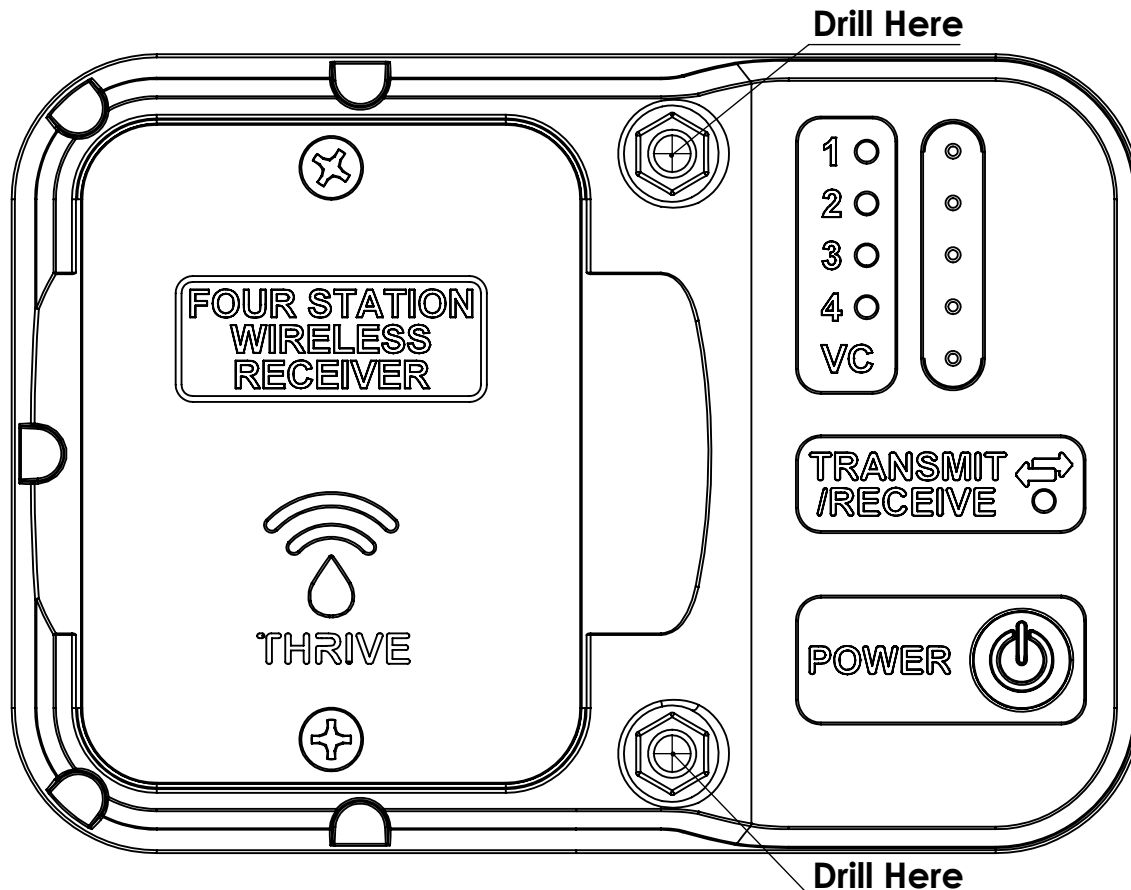

RMT 1700102 REV 1